

Auto pump starts on its own automatically or keeps running

**Check if it is a normal control operation
(The operator understands the variable timer?)**

The sensor and the pump body are connected ?

**Check if the sensor cable tip is touching metal parts
Check if mud, etc., is covering the sensor cable or the entire pump**

Malfunction of relay?

Check by starting without the relay

Working

Replace relay