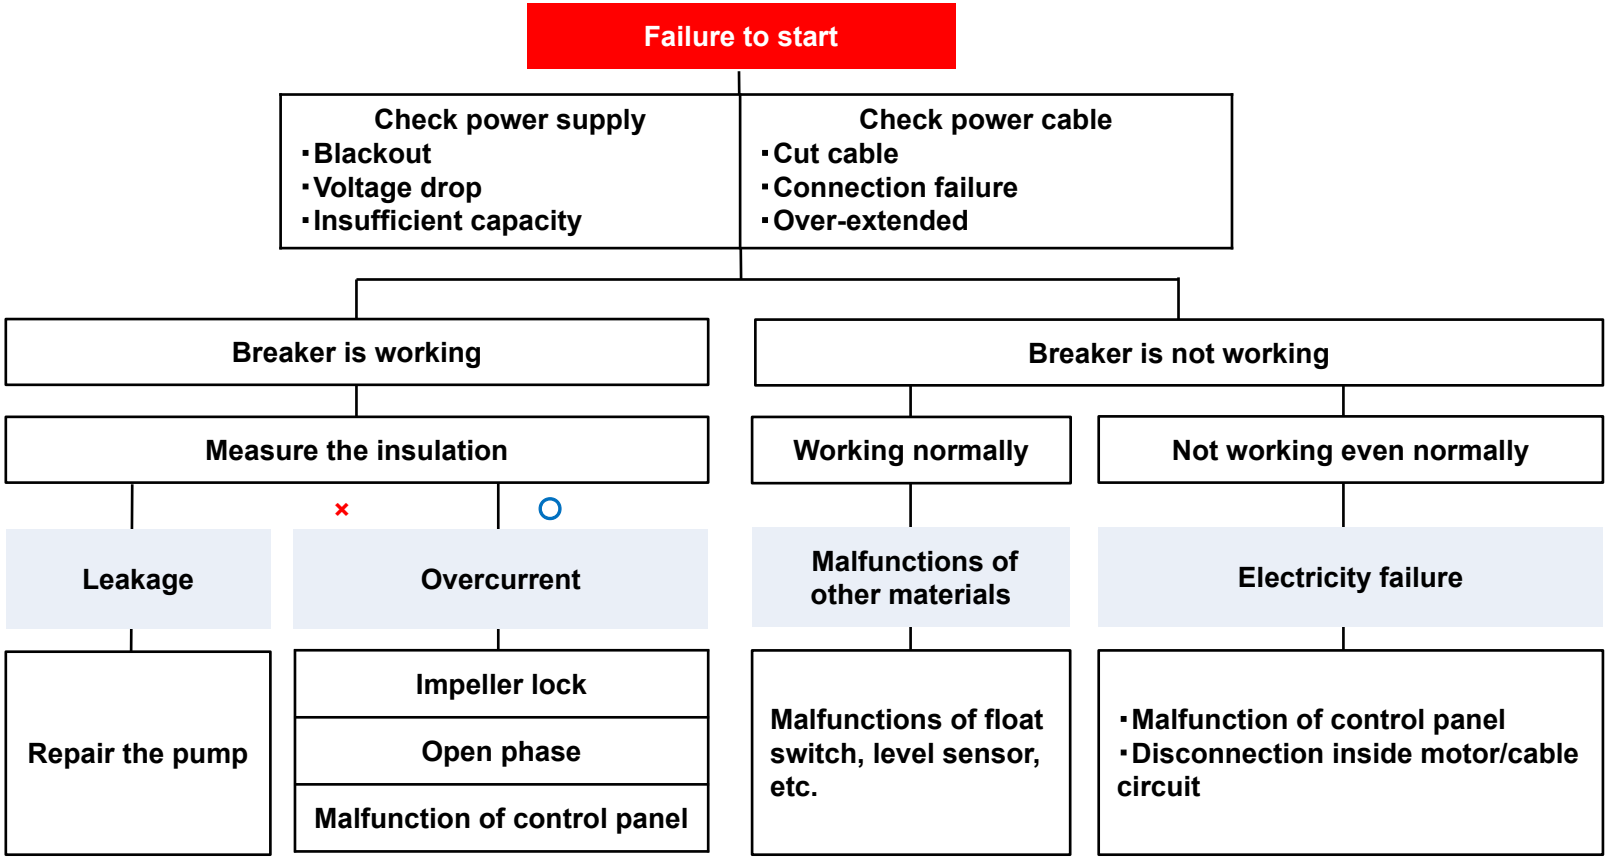
Failure to start
Check power supply
・Blackout
・Voltage drop
・Insufficient capacity
Check power cable
・Cut cable
・Connection failure
・Over-extended
Breaker is working
Breaker is not working
Measure the insulation
Working normally
Not working even normally
×
○
Leakage
Overcurrent
Malfunctions of other materials
Electricity failure
Repair the pump
Impeller lock
Open phase
Malfunction of control panel
Malfunctions of float switch, level sensor, etc.
・Malfunction of control panel
・Disconnection inside motor/cable circuit